

 


CREATOR

20011



BrickMaster

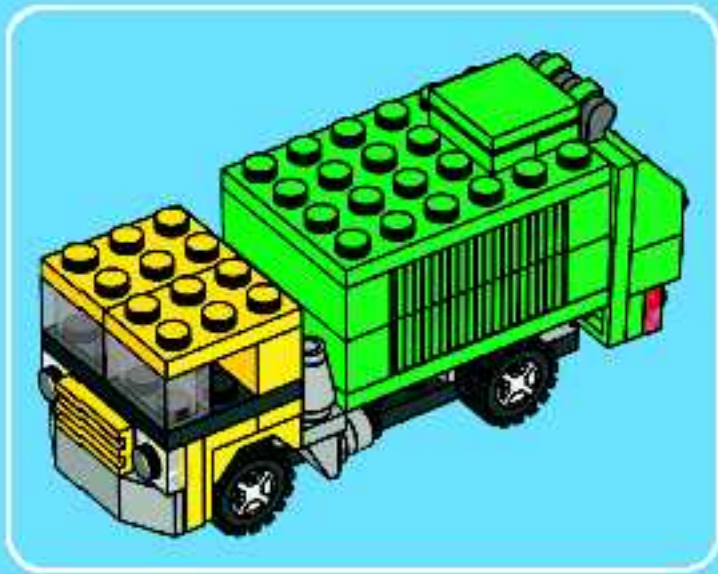


1




2

 
2

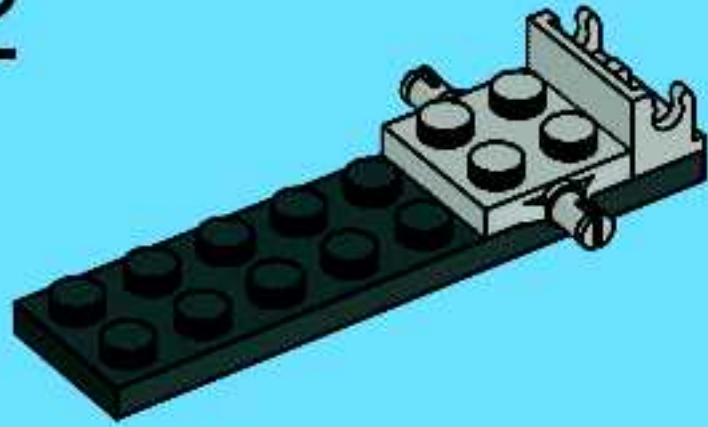


3

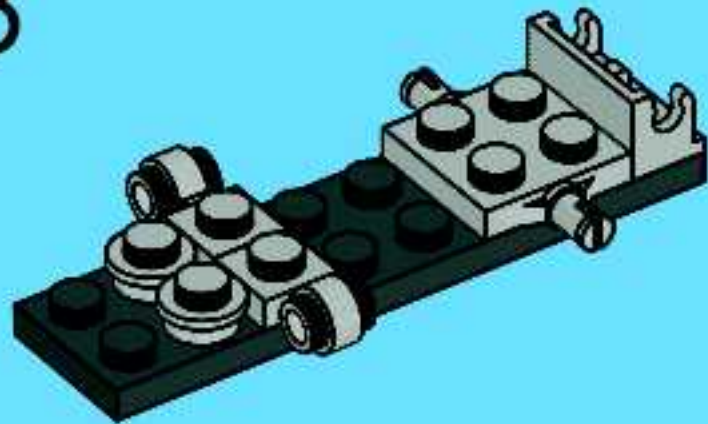 



4

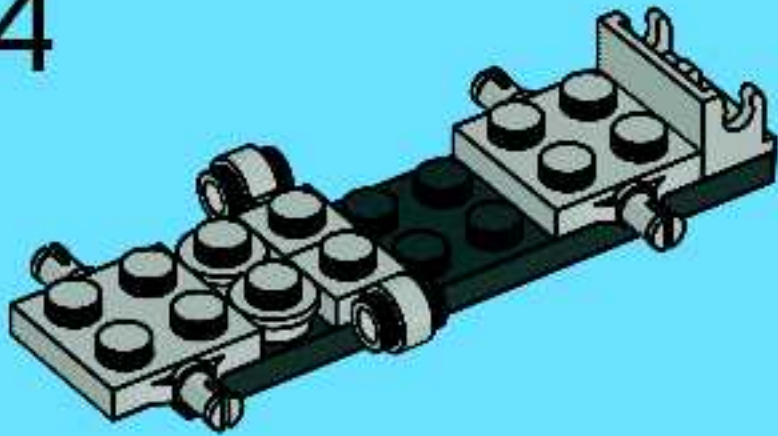 


5

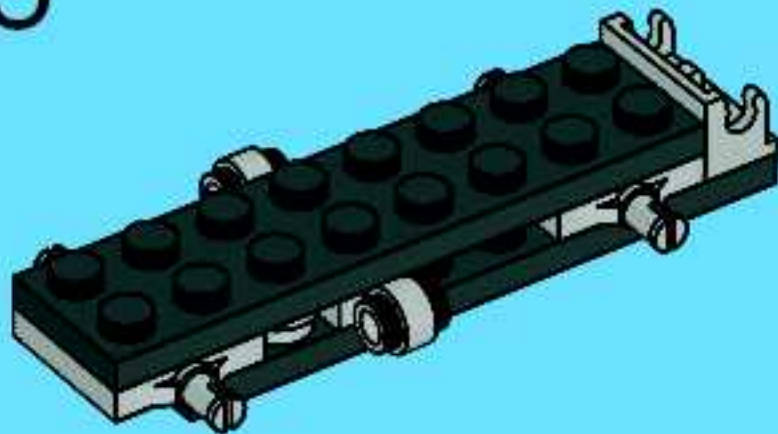 


6

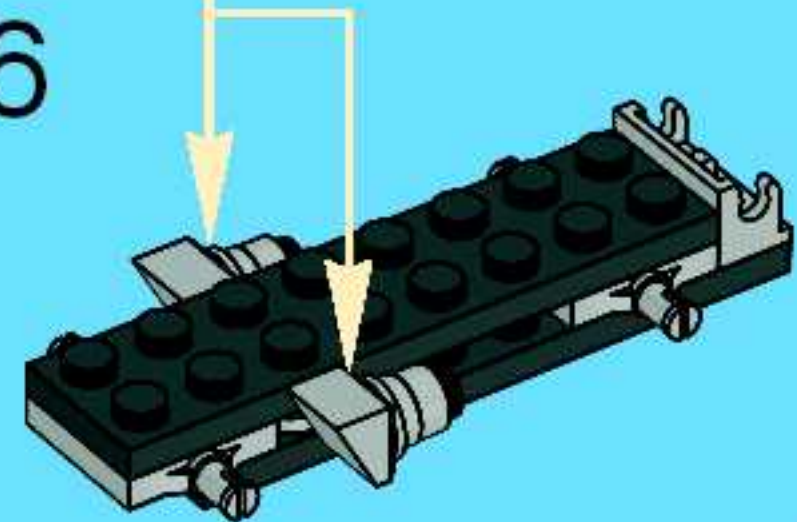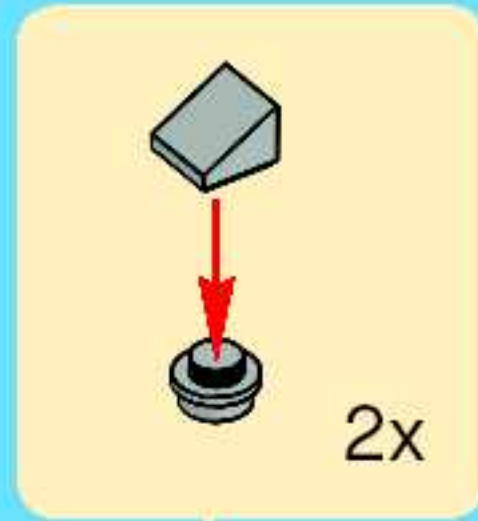  


7

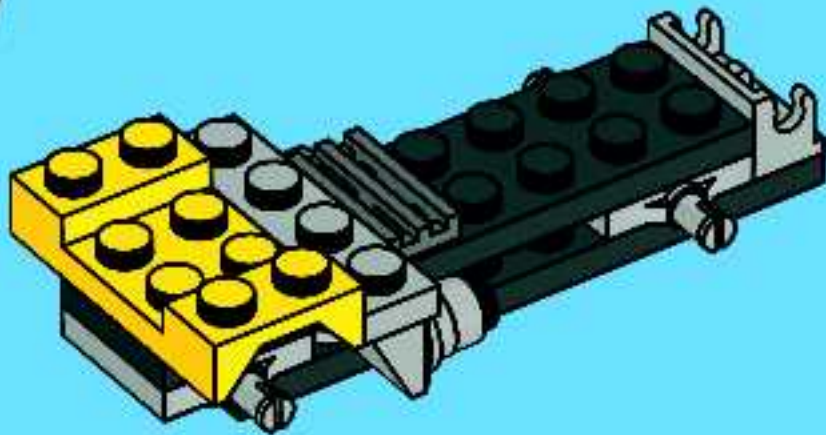 


8

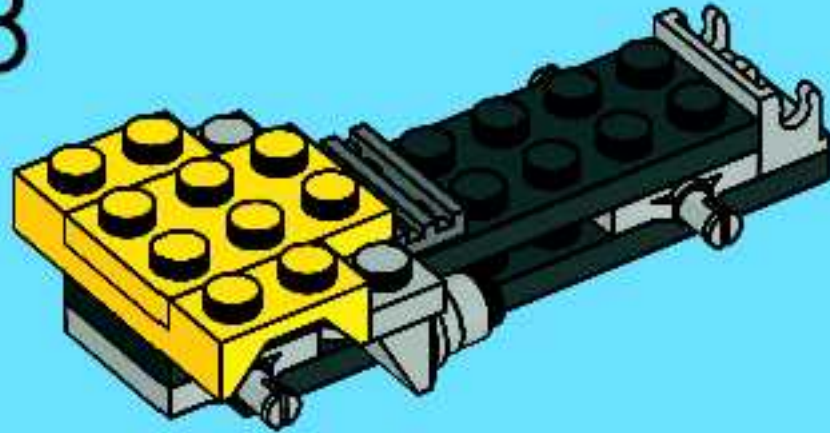 


9

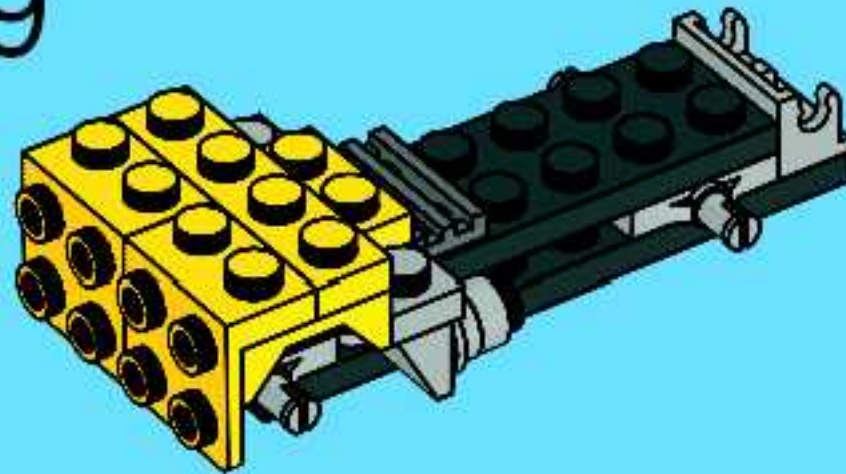 


1

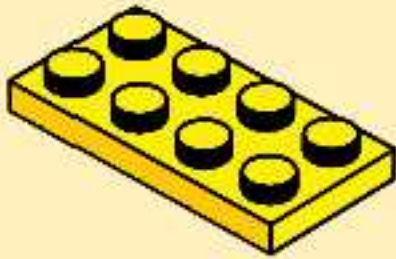 


2

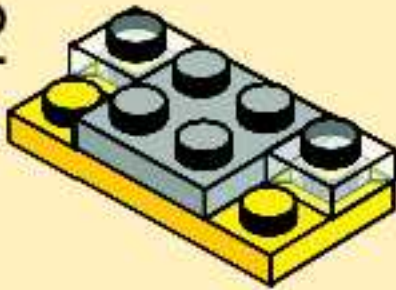 


3

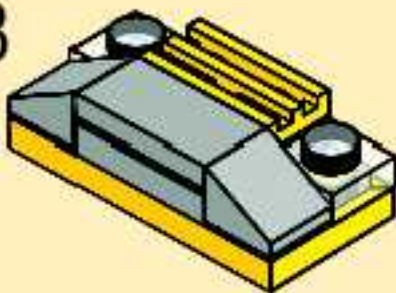 


10

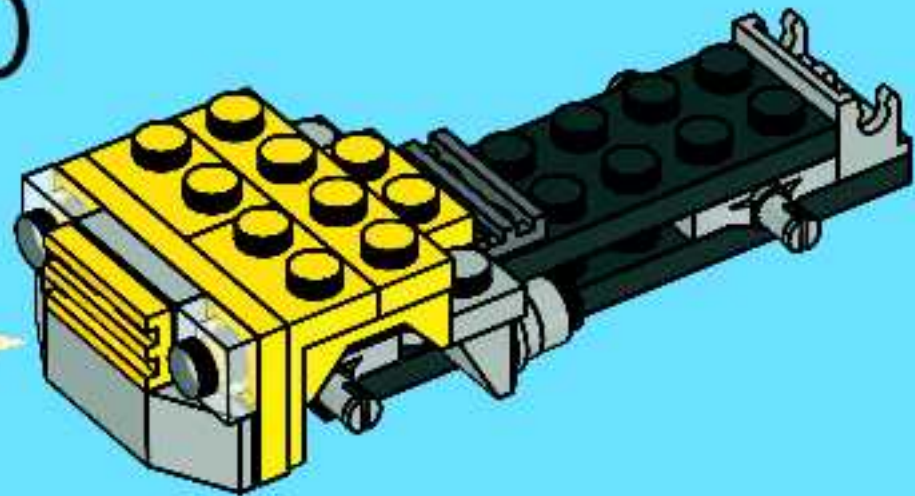 


11

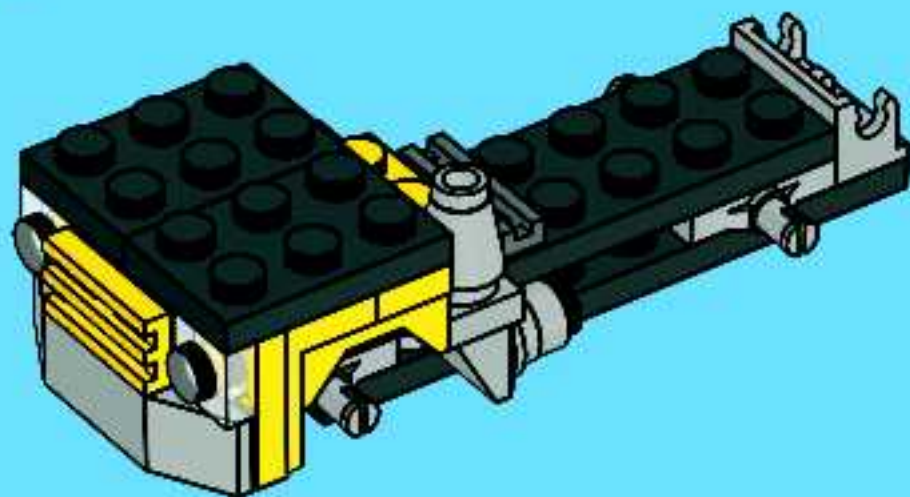 


12

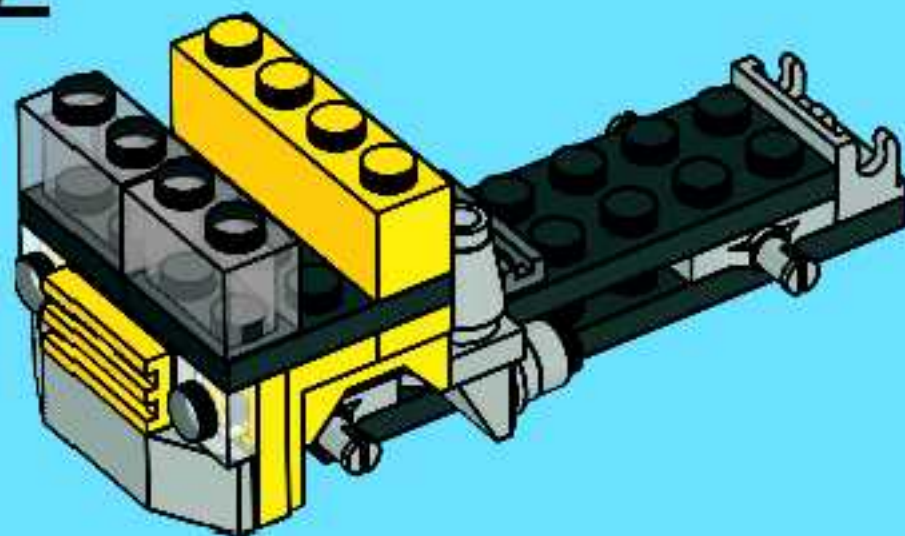 

13

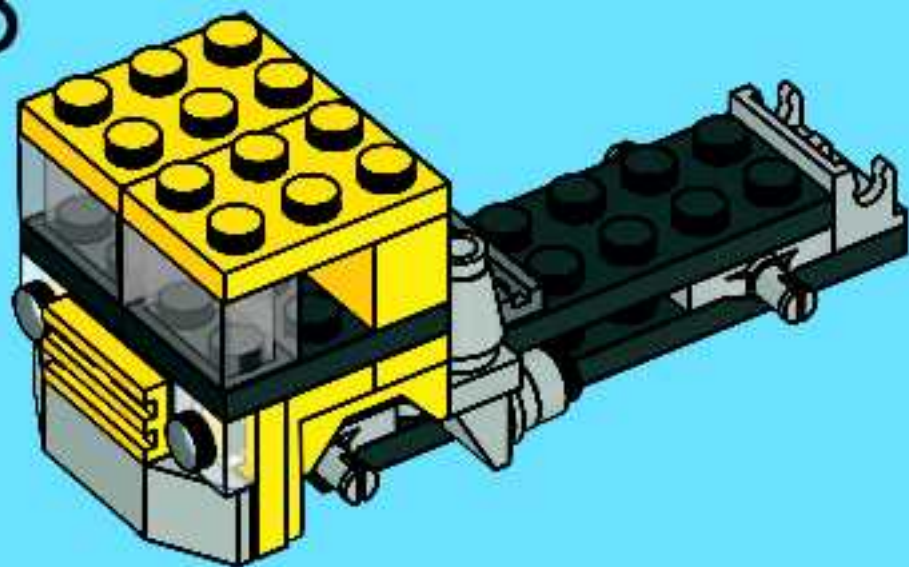 


14

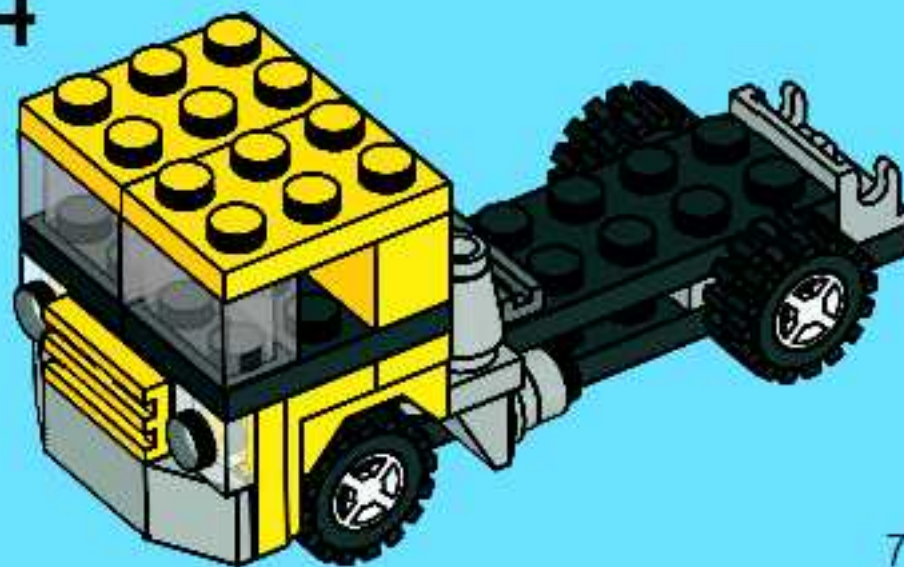 





1

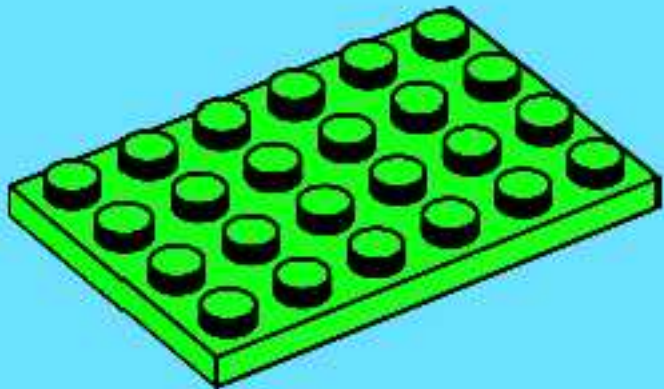 


2

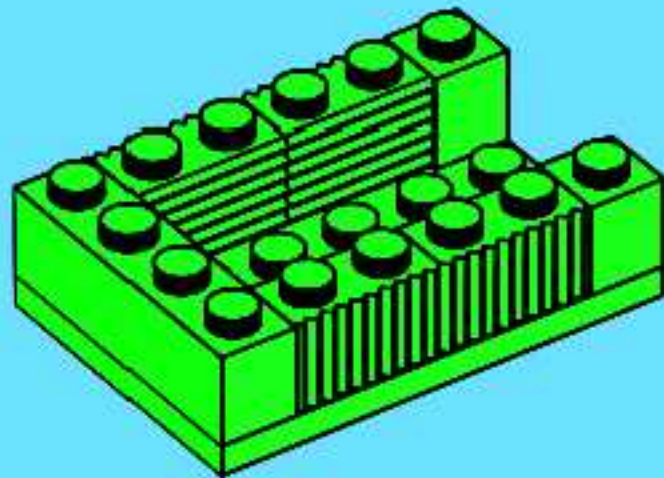 


3

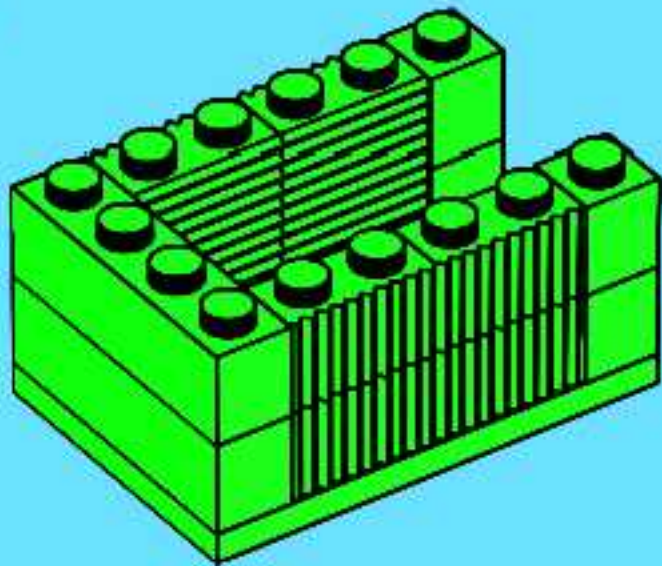 


4

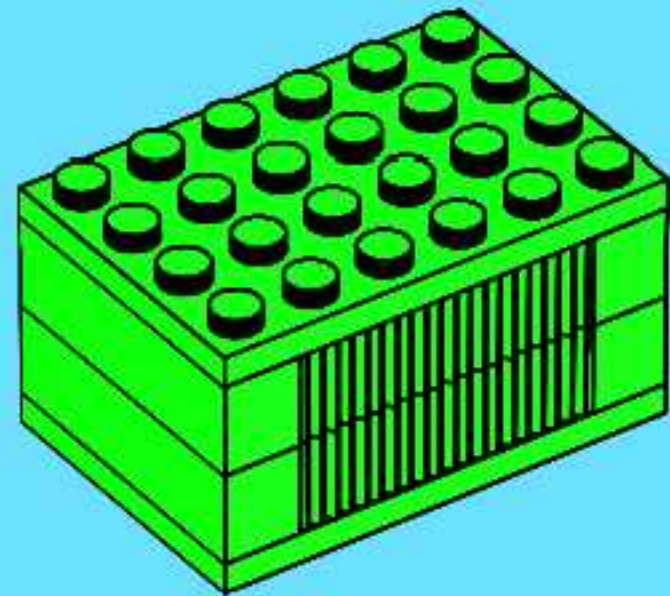 


5

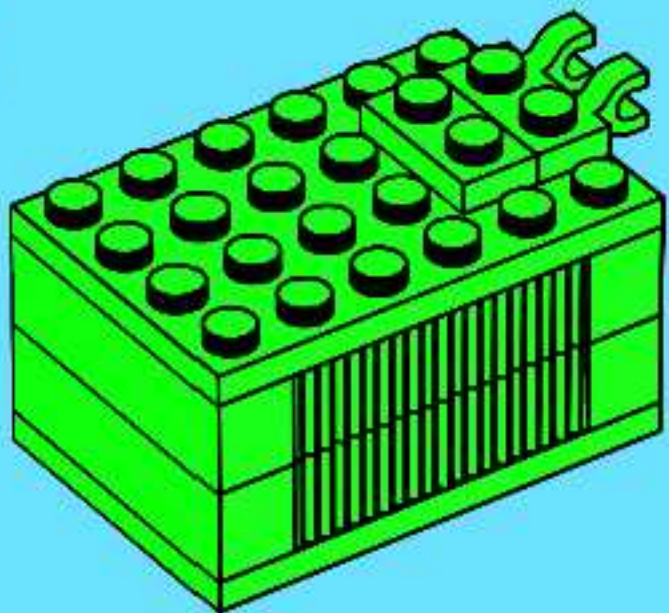 

6

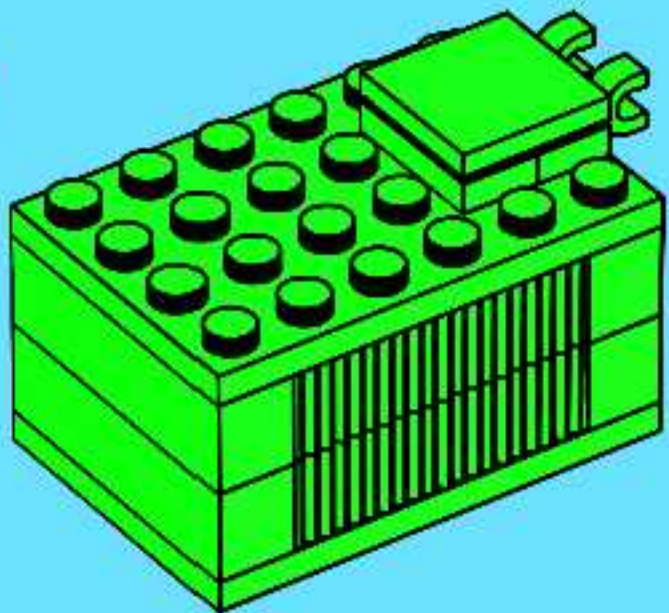 


7

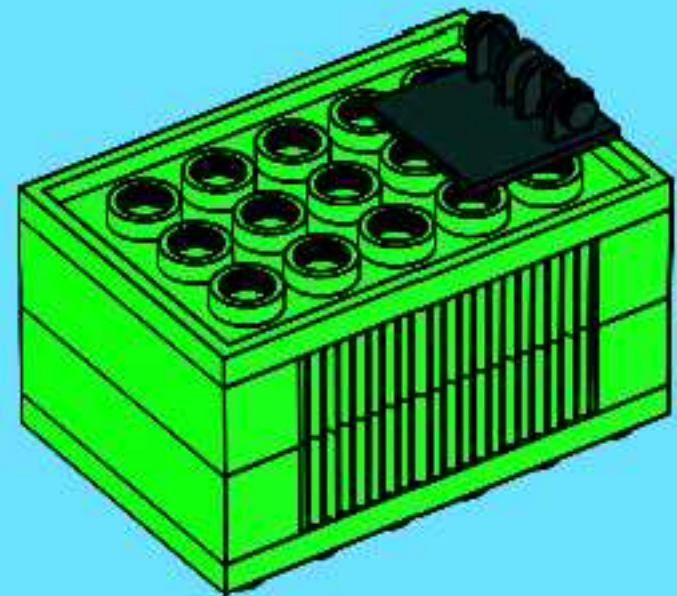 


15




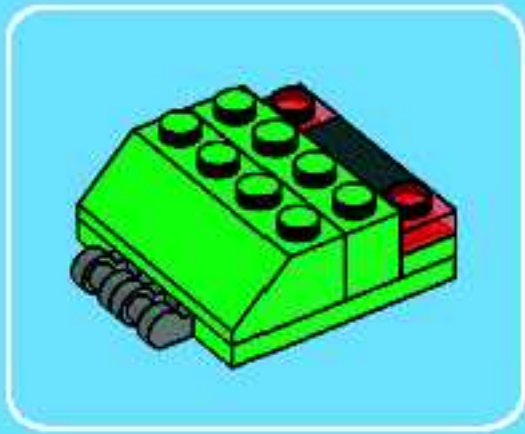 


1

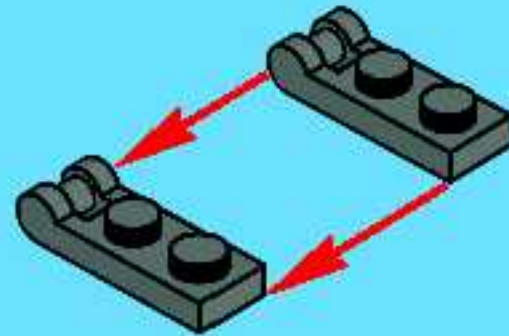 


2

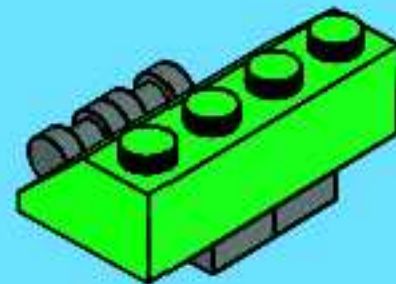 


3

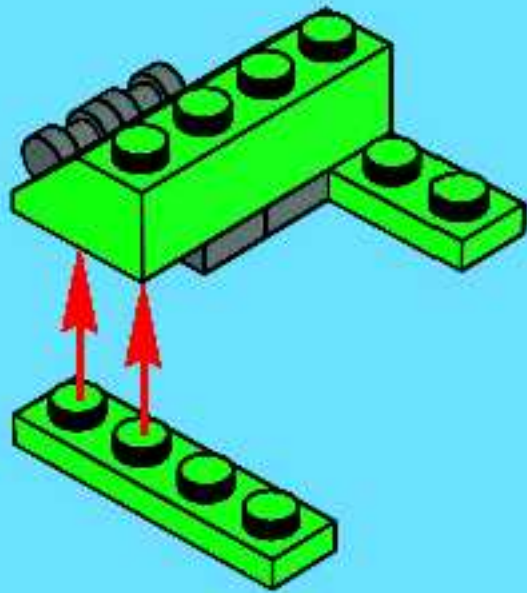 


4

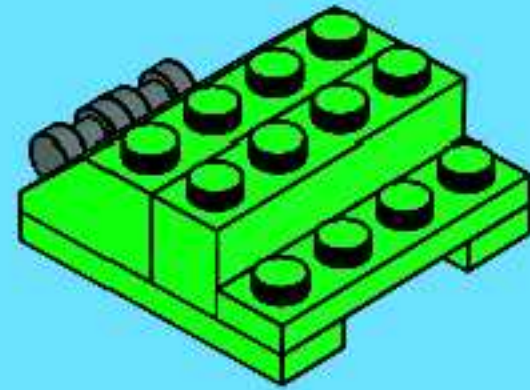 


5

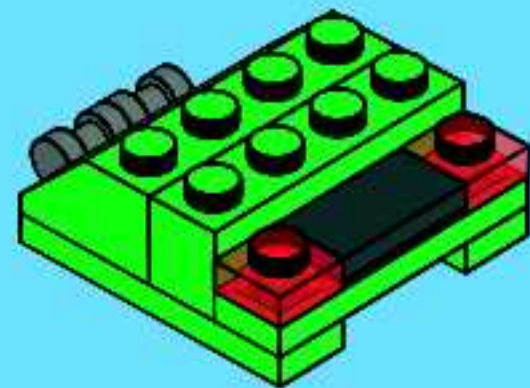 

16

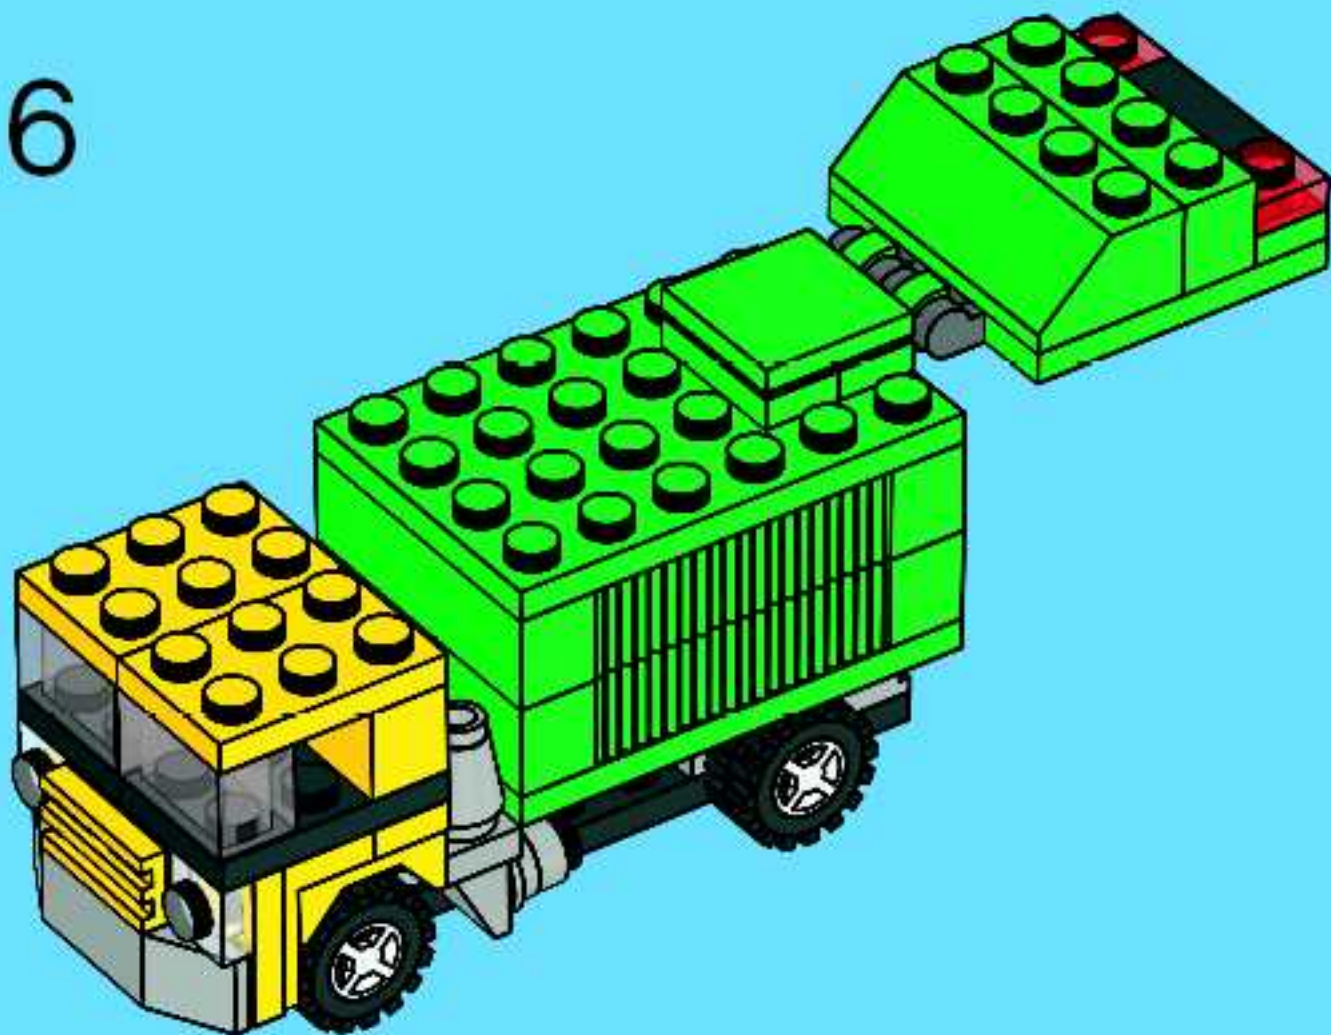 

17

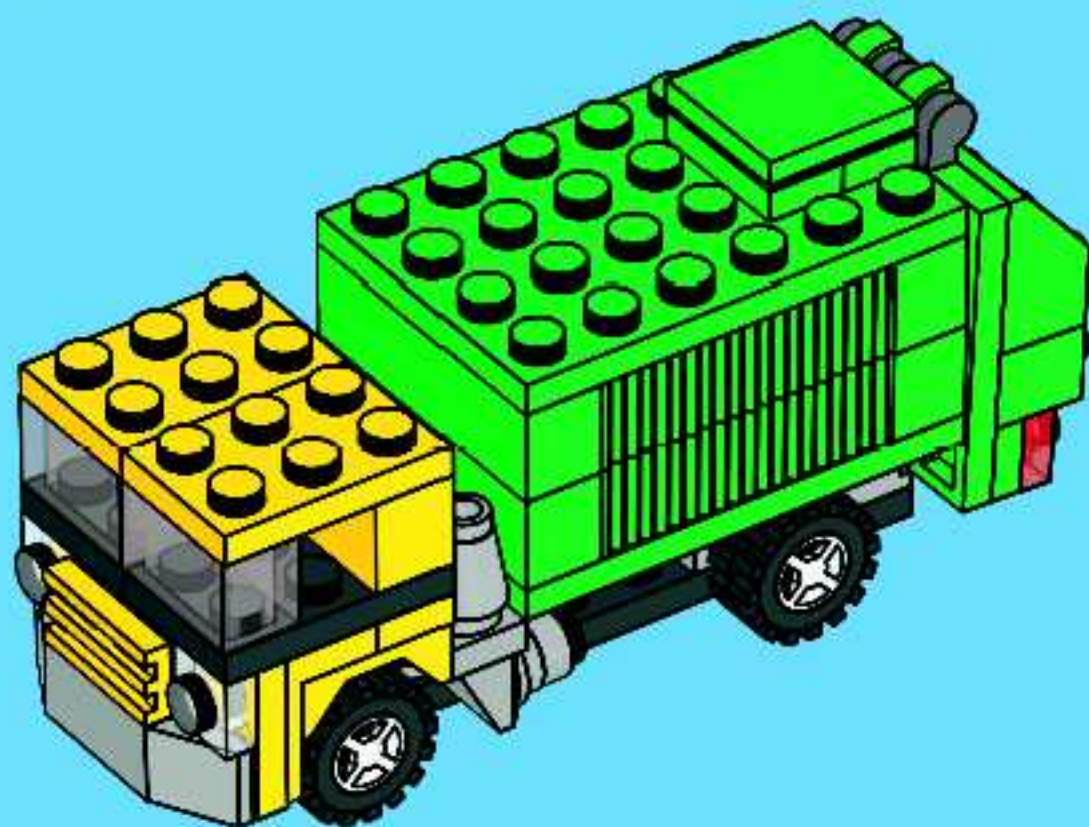 



4x
462401



1x
4124096



1x
371024



1x
378824



1x
4107762



2x
4211477



2x
4226179



2x
302126



3x
302124



2x
4277925



1x
302328



1x
4529241



2x
3000841



4x
4501046



1x
302024



2x
4521187



1x
4520671



1x
4211445



1x
306926



2x
303426



1x
241224



1x
4210631



8x
287728



1x
4211397



Customer Service

Kundenservice

 
Service Consommateurs

Servicio Al Consumidor

www.lego.com/service or dial



00800 5346 5555 :



1-800-422-5346 :



4x
300528



3x
371028



1x
4211469



3x
4112838



1x
4141737



4x
4521921



2x
4116671



2x
4211504



4x
4211525



1x
4211414



2x
3000840